

Driver Controls

Ignition Switch

The ignition switch is a three-position, key-operated switch used to start and stop the engine.

OFF (w) — The engine and all electrical circuits are off. The key can be inserted and removed only when it is in this position.

ON (q) — The electrical circuits are on. You can use the accessory power socket in this position.

START (p) — This position is used only to start the engine. The key will automatically return to the ON (q) position when you let go of it.

