

# Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).											
		Initial maintenance	Regular maintenance interval								
ITEMS	FREQUENCY	x100 mi	1	6	12	18	24	30	36	Note	Refer to page
	(Whichever comes first)	x100 km	1.5	10	20	30	40	50	60		
		Hours	20	100	200	300	400	500	600		
	Lubricate all hinges, latches, and pivots					●			●		164
**	Inspect the following items:										—
	Suspension components										—
	Wheels										195
	Driveshaft boots										196
	Accelerator and brake pedals				●				●		169, 185
	Brake light switch										186
	Exhaust system										176
	Battery terminal condition										198
*	Check the parking lock system adjustment		●						●		—
*	Check shift lever adjustment		●						●		—
**	Inspect the following items:										—
	Tie-rod ends										—
*	Steering gearbox and boots								●		—
*	Brake hoses and lines										—
*	SXS underbody									4	—
	Replace the following items:										—
	Front and rear final gear oil										153, 155
*	Engine coolant										159
*	Brake fluid										—

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 262).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.

Note 4 Check the underbody whenever the under guard has been hit.