

Air Cleaner

Cleaning Sub Air Cleaner

1. Remove the front hood (page 125).
2. Open the sub air cleaner housing cover.
3. Pull the sub air cleaner out.
4. If there is any dirt or foreign object attached to the sub air cleaner, clean it by tapping it. If it is damaged or deteriorated, see your dealer for replacement.
5. Install the sub air cleaner.
6. Close the sub air cleaner housing cover.
7. Install the front hood.

UNDER FRONT HOOD

