

Quick Reference

These symbols are used in Driver Controls section:

SYMBOL	COMPONENT	SEE PAGE
p	START — ignition switch	40
q	ON — ignition switch	40
w	OFF — ignition switch	40
t	OFF — headlight switch	41
i	Low beam — headlight switch	41
u	High beam — headlight switch	41
P, R, N, H, L	Park — Reverse — Neutral — High — Low — shift select lever	43
+	Up — right shift paddle	51
-	Down — left shift paddle	51