


Basic Operation

Shift Position and Meter Display

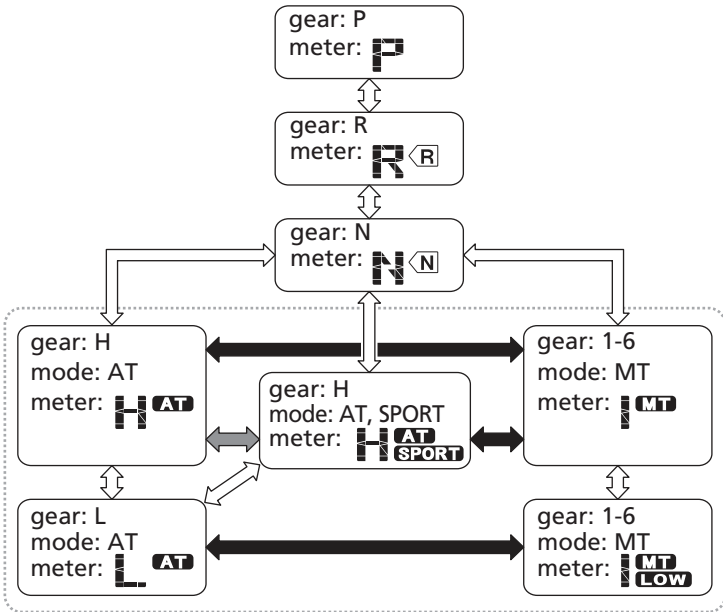

⇒ shift the shift select lever

➡ push the AT/MT switch

➡ push the SPORT switch

⋮ shift override using shift paddles is available. during shift override, shifted gears (1 – 6) are displayed