

Engine Oil & Filters


Drain the Engine Oil:

1. Make sure the Honda SXS is parked on a firm, level surface. Shift the shift select lever into the park (P) position, and jack up and support your Honda SXS (page 144).
2. Lift the cargo bed (page 81).
3. Remove the rear mudguard lid (page 141).
4. Remove the oil fill cap.

UNDER CARGO BED

CENTER

(SXS1000M3P/M3D/M3L)

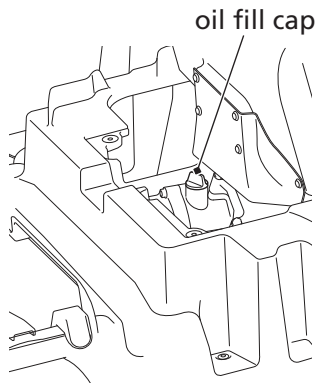

(SXS1000M5P/M5D/M5L)

