

## Fluid Level Inspection

Refer to *Safety Precautions* on page 123.

### Brake Fluid Level

If your inspection indicates a low fluid level, have your dealer inspect the brake system for possible leaks or worn brake pads.

The brake fluid level will drop as the brake pads wear.

Do not add or replace brake fluid, except in an emergency. If you do add fluid, have your dealer check the system as soon as possible.

### NOTICE

*Brake fluid can damage plastic and painted surfaces. Handle with care.*


Check the fluid level on level ground.

1. Slide the brake fluid reservoir tank cap cover up a little to reveal the MAX level mark. Do not remove the brake fluid reservoir tank cap cover.

LEFT FRONT

brake fluid  
reservoir tank

brake fluid reservoir tank cap cover

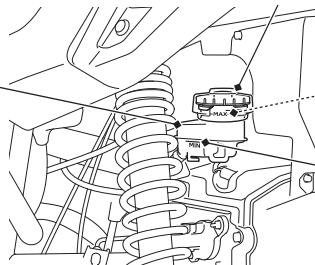

MAX level mark

MIN level mark

It should be between the MIN and MAX level marks. If the level is at or below the MIN level mark, check the brake pads for wear (page 199).

(cont'd)