

## Radiator Core

Refer to *Safety Precautions* on page 115.

Check the air passages for clogging or damage. Remove insects, mud, or any obstruction with low water pressure. Have the radiator checked by your dealer if more than 20% of the radiator surface air flow is restricted.

Clean the radiator core after driving your Honda SXS in mud.

*To clean the radiator core:*

1. Remove the front hood (page 129).
2. Wash the radiator core with low water pressure.

### NOTICE

*Do not apply high pressure water directly to the radiator core. High pressure water can damage the radiator core fins.*