

# Reverse Inhibitor System

---

## Adjustment

1. To adjust, remove the front hood (page 105), loosen the lock nut, and turn the adjusting nut.  
After adjustment, tighten the lock nut securely and check for smooth operation of the reverse lever.
2. Install the remaining parts in the reverse order of removal.

## UNDER FRONT HOOD

