

Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).															
		Initial maintenance	Regular maintenance interval						Note	Refer to page					
FREQUENCY (Whichever comes first)	x100 mi	1	6	12	18	24	30	36							
	x100 km	1.5	10	20	30	40	50	60							
ITEMS		Hours	20	100	200	300	400	500	600						
		Month	1	12											
	Check engine oil and coolant	Check oil and coolant at fuel stop							130, 142						
	Check tires	Check inflation and condition once a month							175						
	Check side net and snap hooks	●	●	●	●	●	●	●	43						
	Check brake fluid	Check fluid level once a month							168						
	Replace engine oil and oil filter	●	●	●	●	●	●	●	132						
*	Inspect valve clearance	●	Every 600 miles (1,000 km) or 100 operating hours, otherwise adjust only if noisy							—					
*	Clean spark arrester		Every 600 miles (1,000 km) or 100 operating hours, whichever comes first							161					
	Clean air cleaner elements													1	147
	Check air cleaner housing drain tube													2	150
	Check spark plug														158
*	Inspect idle speed	●								—					
*	Check fuel lines and connections			●		●		●		—					
	Check front and rear brakes	●			●			●	3	167					
	Check front and rear final gear oil	●			●			●		137, 139					

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 246).

Note 1 Service more frequently when operating in dusty areas, sand or snow.

Note 2 Service more frequently when operated in muddy, very wet conditions, or freezing temperatures.

Note 3 Service more frequently when operated in muddy conditions.