

# Brakes

---

## Brake Pad Wear

Refer to *Safety Precautions* on page 105.

Brake pad wear will depend upon the severity of usage and driving conditions. The pads will wear faster in wet, sandy, or muddy conditions.

Inspect the pads during all regular service intervals to determine the pad wear.

Note that the pads are designed to make a metallic noise during braking when they reach the wear limit.

Front:

If you hear a continuous metallic friction sound when applying the brakes, the brake pads need to be replaced. Have the vehicle checked by a dealer.

Rear:

Check the wear indicator. If the wear indicator aligns with the reference mark, replace both pads as a set, see your dealer for this service.

**REAR**  
reference mark

wear  
indicator

