

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle and brakes. It also provides important information on riding with cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 188).

For information about carburetor adjustment for riding at high altitude, see page 189.

Safe Riding Precautions	45
Off-road Use Only	45
Keep Hands and Feet on Controls.....	46
Control Speed.....	47
Use Care on Unfamiliar or Rough Terrain.....	48
Do Not Perform Stunts.....	49
Starting & Stopping the Engine	50
Preparation	50
Starting Procedure.....	51
Flooded Engine	54
How to Stop the Engine	54
Using the Recoil Starter	55
Shifting Gears	56
Riding in Reverse.....	59

(cont'd)