

# Engine Oil

---

## Changing Engine Oil


Refer to *Safety Precautions* on [page 81](#).

This procedure requires mechanical skill and professional tools such as a torque wrench as well as a means for disposing of the drained fluid ([page 160](#)). If you do not have the skills or the tools, see your dealer.

### *Drain the Engine Oil:*

1. With the ATV on level ground, remove the oil fill cap/dipstick from the front crankcase cover.
2. Place an oil drain pan under the crankcase and remove the engine oil drain plug (1) and sealing washer (2).

### UNDER ENGINE

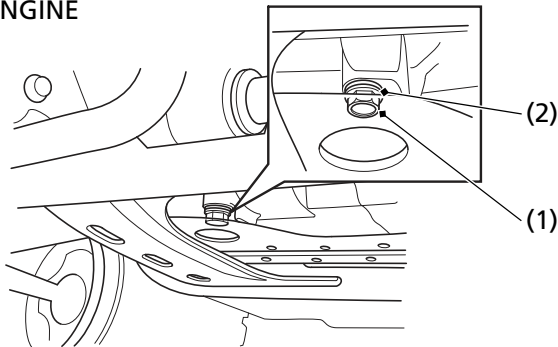

(1) engine oil drain plug

(2) sealing washer