


# Reverse Lock System

## Reverse Lock System Adjustment


Refer to *Safety Precautions* on [page 81](#).

### LEFT HANDLEBAR

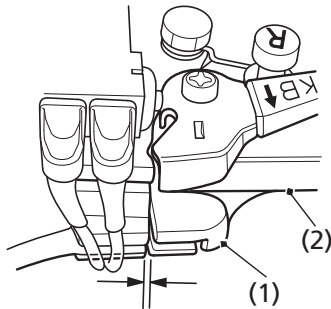

**1/16 – 3/16 in  
(2 – 4 mm)**

- (1) reverse assist lever
- (2) rear brake lever/  
parking brake lever

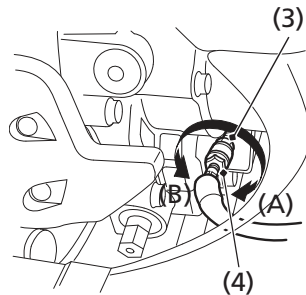

- (3) lock nut
- (4) adjusting nut
- (A) decrease freeplay
- (B) increase freeplay

1. Check the reverse assist lever (1) freeplay, measured at the rear brake lever/parking brake lever (2) end near the cable:  
**1/16 – 3/16 in (2 – 4 mm)**
2. To adjust, loosen the lock nut (3) and turn the adjusting nut (4).  
After adjustment, tighten the lock nut securely.

### Other Checks

Check the reverse assist lever and cable for loose connections or other damage. If the cable is worn or kinked, have it replaced by your dealer.