


Controls & Features

Start Button

O

LEFT HANDLEBAR

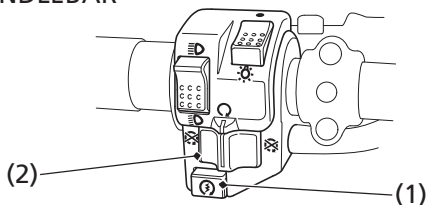

(1) start button

O START

(2) engine stop switch

r OFF

e RUN

The start button (1) is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, [page 49](#).

When the start button is pushed, the starter motor will crank the engine. The starter motor will operate even if the engine stop switch is in the OFF (**r**) position when the start button is pushed.

Engine Stop Switch

e **r**

The engine stop switch (2) is used to stop the engine in an emergency. To operate, slide the switch to the OFF (**r**) position. The switch must be in the RUN (**e**) position to start the engine, and it should normally remain in the RUN (**e**) position even when the engine is OFF.

If your ATV is stopped with the ignition switch ON (**q**) and the engine stop switch OFF (**r**), the battery will discharge. Turn the ignition switch OFF (**w**) to prevent battery discharge.