



If You Have a Flat Tire

Emergency Wheel Removal/Installation

Refer to *Safety Precautions* on page 77.

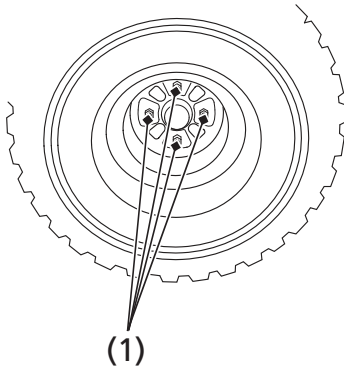

(1) wheel nuts

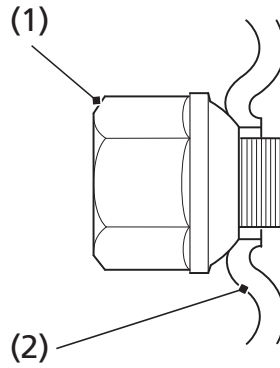

(2) wheel rim

Removal

1. Park your ATV on a firm, level surface.
2. Loosen — but do not remove — the wheel nuts (1).
3. Raise the front (or rear) wheels off the ground and place a support block under the vehicle.
4. Remove the wheel nuts.
5. Remove the wheel.