

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL			Refer to page	
			mi	100	600	1200				
			km	150	1000	2000				
			MONTH	1	6	12				
	NOTE	HOURS	20	100	200					
*	FUEL LINE					I		—		
*	THROTTLE OPERATION					I		107		
*	CARBURETOR CHOKE					I		109		
	AIR CLEANER	NOTE 1				C	C	102		
*	SUB AIR CLEANER	NOTE 1				C	R	—		
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	106		
	SPARK PLUG					I	I	113		
*	VALVE CLEARANCE				I	I	I	116		
	ENGINE OIL				INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			94		
**	ENGINE OIL CENTRIFUGAL FILTER						C	—		
*	ENGINE IDLE SPEED				I	I	I	112		
*	SECONDARY AIR SUPPLY SYSTEM						I	—		

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 194).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.