

Riding in Reverse

10. To stop, pull in the clutch lever/parking brake lever, close the throttle and gradually apply both the front and rear brakes. Do not abruptly apply the rear brake by itself.
11. To shift out of reverse into neutral, pull in the clutch lever/parking brake lever and raise the shift lever one click to neutral. Make sure that the reverse indicator goes off and the neutral indicator comes on.

3 WARNING

Applying only the rear brake abruptly when operating in reverse gear could cause the front wheels to lift off the ground and the ATV could overturn backwards.

Carefully apply both the front and rear brakes when stopping in reverse gear.