

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

| ITEMS | FREQUENCY                      | WHICHEVER COMES FIRST<br>⇒ | INITIAL MAINT. |     |   | REGULAR MAINT. INTERVAL |     | Refer to page |
|-------|--------------------------------|----------------------------|----------------|-----|---|-------------------------|-----|---------------|
|       |                                |                            | mi             | 100 | 600   | 1200                    |     |               |
|       |                                |                            | km             | 150 | 1000  | 2000                    |     |               |
|       |                                |                            | MONTH          | 1   | 6   | 12                      |     |               |
| NOTE  | HOURS                          | 20                         | 100            | 200 |   |                         |     |               |
| *     | FUEL LINE                      |                            |                |     |   | I                       | —   |               |
| *     | THROTTLE OPERATION             |                            |                |     |   | I                       | 104 |               |
| *     | CARBURETOR CHOKE               |                            |                |     |   | I                       | 106 |               |
|       | AIR CLEANER                    | NOTE 1                     |                |     | C   | C                       | 99  |               |
| *     | SUB AIR CLEANER                | NOTE 1                     |                |     | C   | R                       | —   |               |
|       | AIR CLEANER HOUSING DRAIN TUBE | NOTE 2                     |                |     | I   | I                       | 103 |               |
|       | SPARK PLUG                     |                            |                |     | I   | I                       | 113 |               |
| *     | VALVE CLEARANCE                |                            |                |     | I   | I                       | 116 |               |
|       | ENGINE OIL                     |                            |                |     | INITIAL = 100 mi (150 km),<br>20 operating hours or 1 month: R<br>REGULAR = Every 600 mi (1000 km), 100 operating hours or 12 months: R |                         | 91  |               |
| **    | ENGINE OIL CENTRIFUGAL FILTER  |                            |                |     |   | C                       | —   |               |
| *     | ENGINE IDLE SPEED              |                            |                |     | I   | I                       | 112 |               |
| *     | SECONDARY AIR SUPPLY SYSTEM    |                            |                |     |   | I                       | —   |               |

\* Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Service Manual (page 192).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.