

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200	
			km	150	1000	2000	
		MONTH	1	6	12		
		NOTE	HOURS	20	100	200	
	REAR FINAL GEAR CASE OIL				(R: EVERY 2 YEARS)	I	97
*	BRAKE FLUID	NOTE 3				I	119
*	BRAKE SHOE WEAR	NOTE 1				I	125
*	BRAKE PAD WEAR	NOTE 1, 2				I	122
*	BRAKE LIGHT SWITCH			I	I	I	128
	BRAKE SYSTEM			I	I	I	119
*	REVERSE INHIBITOR SYSTEM			I	I	I	111
	GUARDS				I	I	136
*	CLUTCH SYSTEM			I	I	I	107
*	SUSPENSION				I	I	—
*	SPARK ARRESTER				C	C	117
*	NUTS, BOLTS, FASTENERS			I		I	—
**	WHEELS/TIRES			I	I	I	—
**	TIE-ROD AND JOINT BOOTS			I	I	I	—
**	STEERING SHAFT HOLDER BEARING					I	—
**	STEERING SYSTEM					I	—

- * Should be serviced by your dealer, unless you have the proper tools and service data, and is mechanically qualified. Refer to the official Honda Service Manual (page 192).
- ** In the interest of safety, we recommend these items be serviced only by your dealer.