


# Clutch System

## Clutch Adjustment

Refer to *Safety Precautions* on page 76.

### LEFT HANDLEBAR

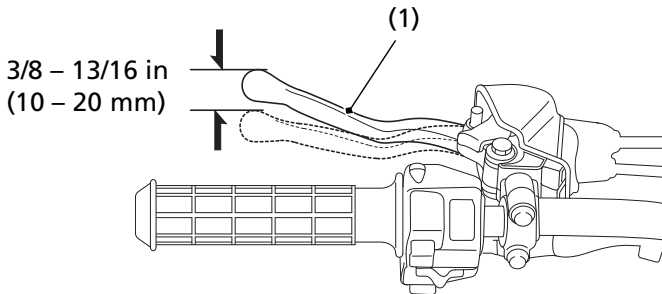

(1) clutch lever/parking brake lever

Clutch adjustment may be required if the ATV stalls when shifting into gear, if it tends to creep, or if the clutch slips, causing acceleration to lag behind engine speed.

### Inspection

Check freeplay at the clutch lever/parking brake lever (1).

Freeplay:

**3/8 - 13/16 in (10 - 20 mm)**

If necessary, adjust to the specified range.

Improper freeplay adjustment can cause premature clutch wear.