

# Indicators & Displays

---

1	Neutral indicator	Lights when the transmission is in neutral. <i>Lamp Check.</i>
2	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check.</i>
3	PGM-FI indicator	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned on. If the indicator comes on at any other time, reduce speed and take your vehicle to your dealer as soon as possible. <i>Lamp Check.</i>
4	High coolant temperature indicator	Lights when coolant temperature is high enough to adversely affect the service life of the engine. If the high coolant temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 220. <i>Lamp Check.</i>
5	PS (Electric Power Steering) indicator (TRX420FA2 only)	Lights when there is an abnormality in the PS (Electric Power Steering) system. See page 48. <i>Lamp Check.</i>