

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL	REGULAR		Refer to page	
			MAINT.	MAINT. INTERVAL			
			mi	100	600		1200
			km	150	1000		2000
MONTH	1	6	12				
NOTE	HOURS	20	100	200			
	DRIVETRAIN BOOTS			I	I	183	
	FRONT and REAR FINAL GEAR OIL			(R: EVERY 2 YEARS)	I	134, 137	
*	2WD/4WD SELECT SYSTEM				I	—	
*	BRAKE FLUID	NOTE 3		I	I	163	
*	BRAKE SHOES WEAR	NOTE 1, 2			I	171	
*	BRAKE PADS WEAR	NOTE 1, 2			I	166	
*	BRAKE LIGHT SWITCH		I	I	I	172	
	BRAKE SYSTEM		I	I	I	163	
*	REVERSE LOCK SYSTEM		I	I	I	154	
	GUARDS			I	I	181	
*	SUSPENSION			I	I	160	
*	SPARK ARRESTER			C	C	159	
*	NUTS, BOLTS, FASTENERS		I		I	—	
**	WHEELS/TIRES		I	I	I	174	
**	TIE-ROD AND JOINT BOOTS		I	I	I	—	
**	STEERING SHAFT HOLDER BEARINGS				I	—	
**	STEERING SYSTEM				I	—	

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 248).

\*\* In the interest of safety, we recommend these items be serviced only by your dealer.