
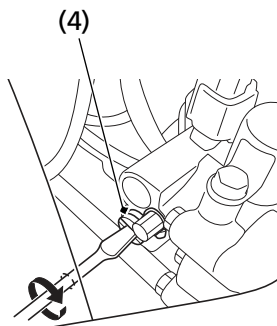


If the Transmission Is Not Functioning Properly

6. Turn the emergency valve (4) by the screwdriver using the inside of the front fender hole (5) all the way in. With the engine running, your ATV will move forward slowly at idle.
7. See your dealer as soon as possible.

LEFT SIDE

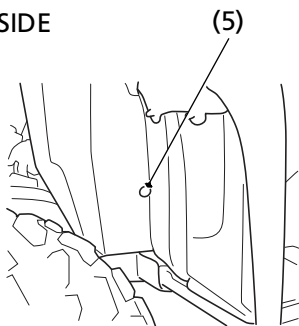

(4) emergency valve

(5) inside of the front fender hole

When the battery is low (or dead):

- See *If the Battery Is Low (or Dead)*, page 229.