


# Indicators & Displays

## Speed and Mileage Unit Changing

The speedometer, odometer, tripmeter and maintenance tripmeter show in either “MPH” and “MILE” or “KM/H” and “KM”.


To change the speed and mileage unit, press and hold the mode button (1) for more than 5 seconds in odometer (page 28) with the ATV stopped.

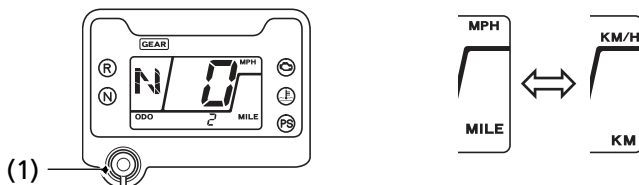

(1) mode button

## 4WD Indicator

The 4WD indicator (1) appears when the 4WD mode engages (page 35).

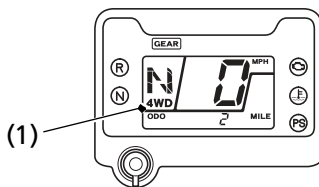

(1) 4WD indicator