


Air Cleaner

Cleaning

1. Remove the seat (page 122).

UNDER SEAT

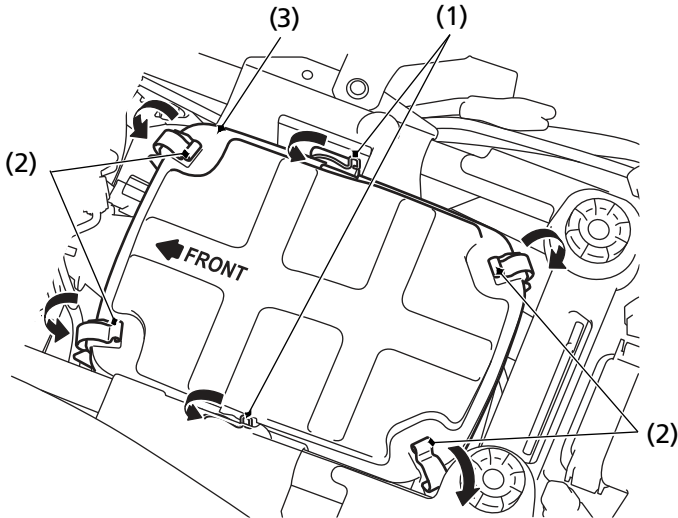

(1) spring hooks

(3) air cleaner housing cover

(2) retainer clips

2. Unlatch the spring hooks (1) and retainer clips (2).
3. Remove the air cleaner housing cover (3).

(cont'd)