

If the Transmission Is Not Functioning Properly


If the ATV does not move, even though “-” is not blinking in the gear position indicator:

If your ATV won't move, it is possible the transmission system has malfunctioned.

Use the following procedure to manually override the clutch of the transmission.

1. Shift the transmission into 2nd gear.
2. Apply the parking brake (page 44).
3. Turn the ignition switch to the OFF (w) position.
4. Remove the oil check lid (page 133).
5. Using the gear change tool (1), loosen the screw (2) and release the lock plate (3).

LEFT SIDE

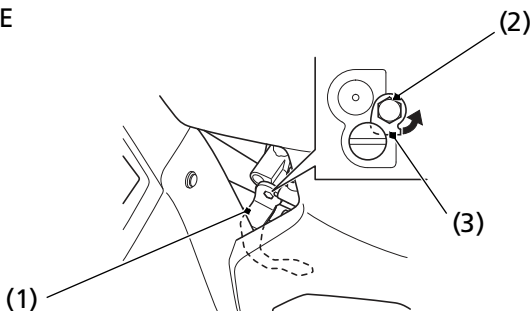

(1) gear change tool

(3) lock plate

(2) screw

6. Locate the emergency valve access hole (4) inside the left front fender. Using a screwdriver, turn the emergency valve (5) all the way in. With the engine running, slowly open the throttle to move the ATV forward.