


If the Transmission Is Not Functioning Properly


7. See your dealer as soon as possible.

LEFT FRONT

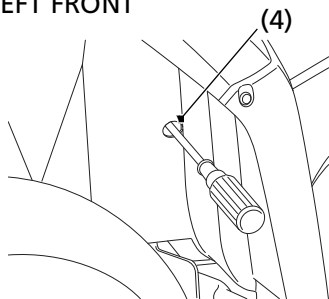

(4) emergency valve access hole

LEFT SIDE

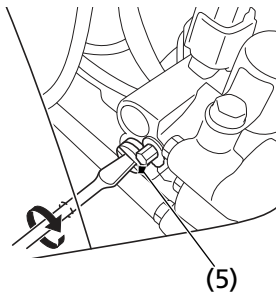

(5) emergency valve hole

When the battery is low (or dead):

- See *If the Battery Is Low (or Dead)*, page 231.