

# If a Fuse Blows


## EPS (Electric Power Steering) Fuse Access (TRX420FA6 only)

1. Turn the ignition switch to OFF (w) before checking the fuse.
2. Remove the seat (page 122).
3. Remove the rear fender cover (page 125).
4. To access the EPS block fuse (1), remove the EPS block fuse cover (2).

If the EPS block fuse is blown, see your dealer for this service.

5. Install the EPS block fuse cover.
6. Install the rear fender cover.
7. Install the seat.

## UNDER REAR FENDER COVER

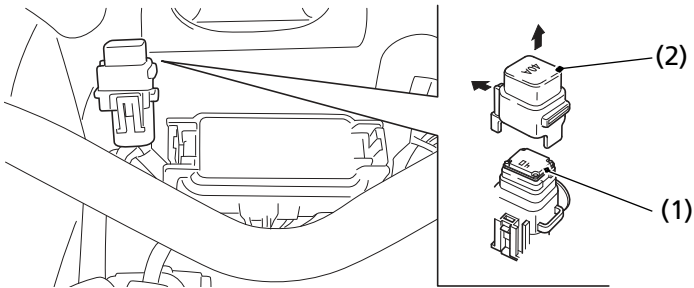

(1) EPS block fuse

(2) EPS block fuse cover