Is Your ATV Ready to Ride?

Cable	Check the cable housings for wear. Check the fittings for looseness. Replace or tighten as needed.
Lights	Make sure the headlight, brake light and taillight are working properly.
If you are carrying cargo, also check the following:	
Loading Limits	Make sure you do not exceed the load limits (page 50).
Cargo	Check that all cargo is secure.
Check these items after you get on the ATV:	
Throttle	Check the freeplay and adjust if needed. Press the throttle to make sure it moves smoothly without sticking, and snaps shut automatically when it is released, in all steering positions (page 135).
Brakes	Squeeze the front and rear brake levers and step on the rear brake pedal to check that the controls operate normally. Press down on the rear brake pedal several times, then check for proper brake lever freeplay (page 148). Make sure there is no brake fluid leakage.
Reverse Assist Lever	Check the freeplay and adjust if needed (page 137). Make sure the lever operates smoothly without sticking.