

Indicators & Displays

| | | |
|---|-------------|--|
| 6 | Mode button | Selects display in the lower parts of multi-function display (page 21). This button also used to change the speed and mileage unit (page 23), adjusts the clock (page 27) and resets tripmeter, maintenance tripmeter and maintenance hourmeter (page 32). |
|---|-------------|--|