
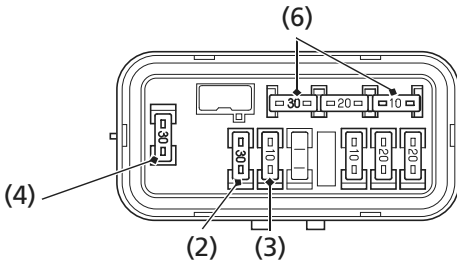


# If a Fuse Blows

## Main and Shift Motor Fuses Access

1. To prevent an accidental short circuit, turn the ignition switch to OFF (O) before checking or replacing the fuses.
2. Remove the seat ([page 114](#)).
3. Remove the rear fender cover ([page 138](#)).
4. To access the main fuses (2) (3) and shift motor fuse (4), remove the fuse box cover (5).

## UNDER REAR FENDER COVER

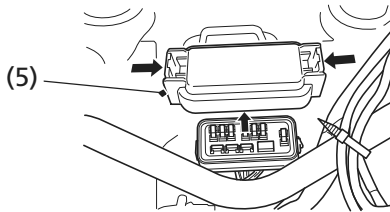

(2) main fuse 1

(3) main fuse 2

(4) shift motor fuse

(5) fuse box cover

(6) spare fuses

5. Pull the main fuse out.  
If it is blown, install the spare fuses (6).

(cont'd)