

# Shifting Gears

---

- Downshift to a lower gear before you feel the engine laboring (lugging) at low rpm.
- Avoid downshifting to help slow your ATV when engine rpm is high. Downshifting when engine speed is near its allowable maximum may over-rev the engine and possibly cause damage.
- To prevent transmission damage, do not coast or tow the ATV for long distances with the engine off.

## Recommended Shift Points

Ride in the highest gear that lets the engine run and accelerate smoothly.

This will give you good fuel economy and effective emissions control.