

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES FIRST	INITIAL			Refer to page	
				MAINT. INTERVAL				
				mi	100	600		1200
				km	150	1000		2000
		MONTH	1	6	12			
		NOTE	HOURS	20	100	200		
*	FUEL LINE					I	—	
*	THROTTLE OPERATION					I	149	
	AIR CLEANER	NOTE 1			C	C	143	
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	148	
	SPARK PLUG				I	I	153	
*	VALVE CLEARANCE			I	I	I	156	
	ENGINE OIL			INITIAL= 100 mi (150km), 20 operating hours or 1 month: R			122	
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			127	
*	ENGINE IDLE SPEED			I	I	I	—	
	RADIATOR COOLANT	NOTE 3			I	I	136	
*	COOLING SYSTEM	NOTE 2			I	I	—	

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 244).