


# Drivetrain Boots

---

## Propeller Shaft Boots & Yoke Joint Boot

Refer to *Safety Precautions* on page 103.

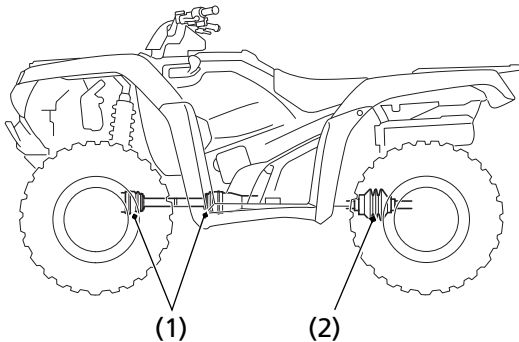

(1) propeller shaft boots (Except TRX420TE1)

(2) yoke joint boot

Check the propeller shaft boots (1) and yoke joint boot (2) for damage or leaking grease. If necessary, have your dealer replace them.