


Air Cleaner

Cleaning

1. Remove the seat (page 100).

UNDER SEAT

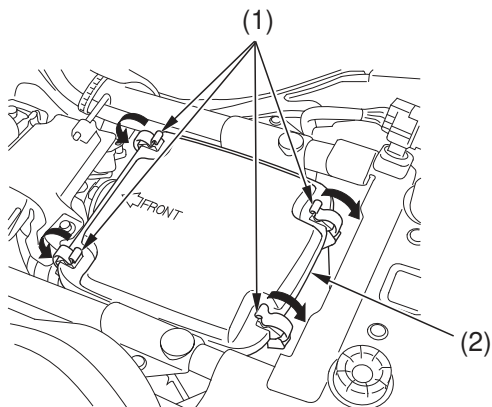

(1) retainer clips

(2) air cleaner housing cover

2. Unlatch the retainer clips (1).
3. Remove the air cleaner housing cover (2).

(cont'd)