


If a Fuse Blows

Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF (○) before checking or replacing the fuses.
2. Remove the seat (page 100).
3. Remove the rear fender cover (page 121).
4. To access the main fuse (2) and shift motor fuse (3), remove the fuse box cover (4).

UNDER REAR FENDER COVER

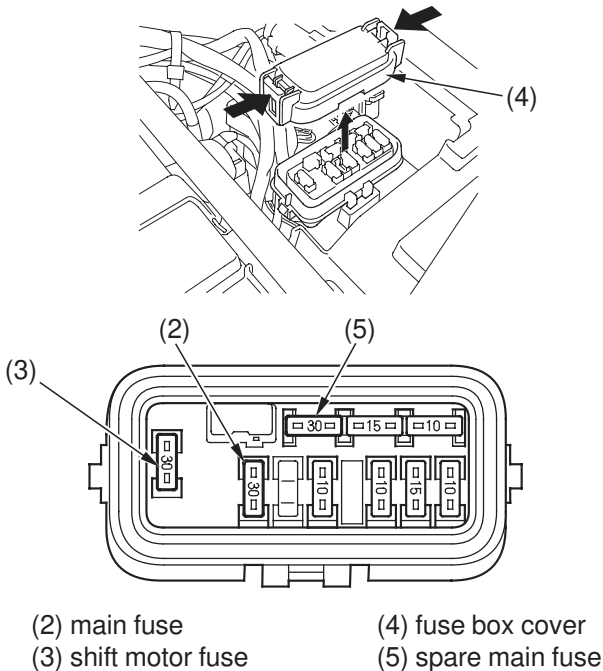

5. Pull the main fuse out.
If it is blown, install the spare main fuse (5).

(cont'd)