

# Indicators & Displays

---

When the fuel gauge show E \_ \_ \_ \_ \_ F (4) and LO FUEL (5) blink 3 times alternately and fuel mark blinks, you should refill the tank as soon as possible.

(The fuel mark blinks except the fuel gauge display)

The amount of fuel reserve approximately:

1.29 US gal (4.9 ℓ)



 
(4) E \_ \_ \_ \_ \_ F

(5) LO FUEL

Fuel gauge failure:

When the fuel gauge show E - - - - - F (6) will blink, when the fuel gauge function fails. See your dealer.

(The fuel mark disappears except the fuel gauge display)



(6) E - - - - - F