


Indicators & Displays

Odometer (Except TRX420TM1)

The odometer (1) registers total distance traveled in mileage while the ignition is ON (q) with the ODO display (2). The odometer locks at 999999 when the read-out exceeds 999999.

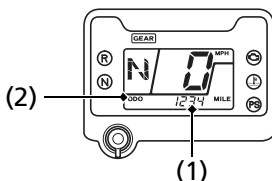


(1) odometer

(2) ODO display

Tripmeter (Except TRX420TM1)

The tripmeter (1) shows mileage per trip with the TRIP display (2), while the ignition is ON (q) since you last reset the tripmeter. The tripmeter returns to 0.0 when the read-out exceeds 999.9. To reset the tripmeter to zero, press the mode button (3) and hold it in for at least 2 seconds in the tripmeter mode.

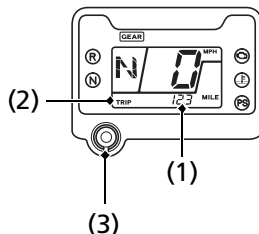

(1) tripmeter

(3) mode button

(2) TRIP display