


# Indicators & Displays

## Coolant Temperature Gauge (Except TRX420TM1)

The coolant temperature gauge (1) with the coolant temperature mark (2) shows the coolant temperature. When coolant temperature is low, the coolant temperature gauge will display “Lo”.

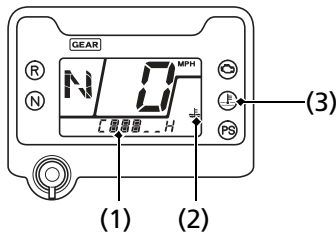

- (1) coolant temperature gauge      (3) high coolant temperature indicator  
(2) coolant temperature mark

If all sections of the coolant temperature gauge and high coolant temperature indicator are on (automatically appears in the display) while you are riding, immediately stop the vehicle, turn the engine off and check the coolant reserve tank level. See page 137.

