## NOTICE

An improperly tightened spark plug can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

- 10. Connect the spark plug cap. Take care to avoid pinching any cables or wires.
- 11. Install the remaining parts in the reverse order of removal.