


# Controls & Features

## Parking Brake/Reverse Lever (P/R Lever)

### LEFT HANDLEBAR

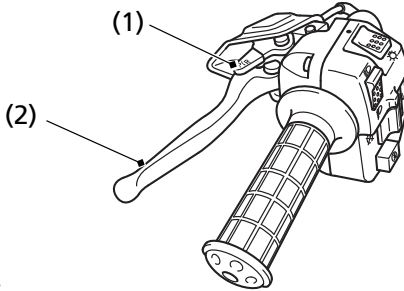

(1) P/R lever

(2) rear brake lever/parking brake lever


The P/R lever (1) on the rear brake lever/parking brake lever (2) is used to apply the parking brake or to shift the transmission into reverse.

### To apply the parking brake:

Bring the vehicle to a complete stop, make sure the transmission is in neutral.

Squeeze the rear brake lever/parking brake lever (2), then rotate the P/R lever (1) clockwise until it engages the slot on the rear brake lever/parking brake lever bracket.

For more information on *Parking*, see page 96.

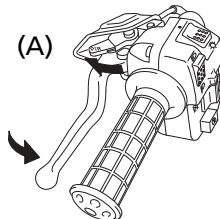

(A) to apply the parking brake

(cont'd)