


# Drivetrain Boots

---

## Propeller Shaft Boots & Yoke Joint Boot

Refer to *Safety Precautions* on page 101.

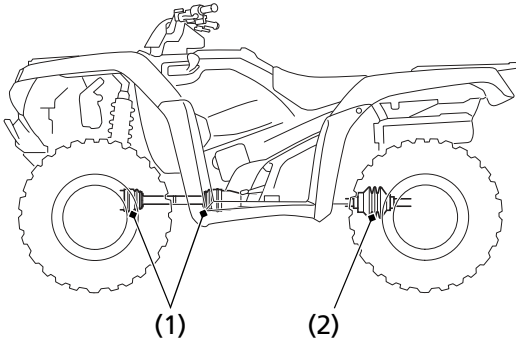

- (1) propeller shaft boots (Except TRX420TM1)
- (2) yoke joint boot

Check the propeller shaft boots (1) and yoke joint boot (2) for damage or leaking grease. If necessary, have your dealer replace them.