

Indicators & Controls

This section shows the location of all indicators and controls you would normally use before or while riding your ATV.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

| | |
|--|----|
| Operation Component Locations | 10 |
| Indicators..... | 13 |
| High Coolant Temperature Indicator | 13 |
| Neutral Indicator | 14 |
| Controls & Features | 15 |
| Fuel Valve | 15 |
| Choke Knob | 16 |
| Ignition Switch | 17 |
| Start Button | 18 |
| Engine Stop Switch | 19 |
| Headlight Switch..... | 20 |
| Headlight Dimmer Switch..... | 20 |
| Throttle Lever | 21 |
| Clutch Lever/Parking Brake Lever | 21 |
| Front Brake Lever | 22 |
| Rear Brake Pedal..... | 22 |
| Parking Brake..... | 23 |
| Flag Pole Bracket | 24 |