


## High Coolant Temperature Indicator

CENTER OF HANDLEBAR

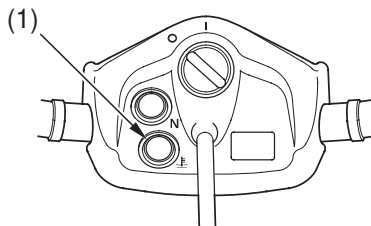

(1) high coolant temperature indicator

Lights when the engine coolant temperature is high enough to adversely affect the service life of the engine.

If the high coolant temperature indicator (1) comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 185.

### Lamp Check

The high coolant temperature indicator comes on for a few seconds and then goes off when you turn the ignition switch to ON ( I ).

If the indicator does not come on when it should, have your dealer check for a burned-out bulb or other problems.