


Starting & Stopping the Engine

Preparation

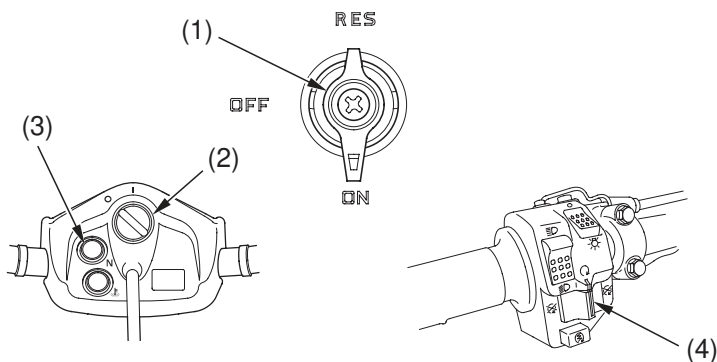

(1) fuel valve
(2) ignition switch

(3) neutral indicator
(4) engine stop switch

1. Before starting, select a level surface and lock the parking brake (page 23).
2. Turn the fuel valve (1) and ignition switch (2) to ON (|).

Confirm the following:

- The transmission is in neutral, and the neutral indicator (3) is ON.
- The engine stop switch (4) is set to RUN (◯).

The high coolant temperature indicator should go off a few seconds after the ignition switch to ON (|).