

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	REGULAR			Refer to page
			INITIAL MAINT.	MAINT. INTERVAL		
			mi	600	1200	
			km	1000	2000	
			MONTH	1	12	
NOTE	HOURS	20	100	200		
*	FUEL LINE				I	—
*	THROTTLE OPERATION				I	110
	AIR CLEANER	NOTE 1			C C	106
	SPARK PLUG				I	117
*	VALVE CLEARANCE/ DECOMPRESSOR SYSTEM				I I I	120
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R		88
	ENGINE OIL FILTER			REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		92
*	TRANSMISSION OIL				R R	95
*	ENGINE IDLE SPEED				I I I	116
	RADIATOR COOLANT	NOTE 3			I I	104
*	COOLING SYSTEM	NOTE 2			I I	100

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 210).