

Indicators & Displays

6	PS (Electric Power Steering) indicator (TRX500FA6/FA7)	Lights when there is an abnormality in the PS (Electric Power Steering) system. See page 57 . <i>Lamp Check</i> .
7	Multi-function display	The display includes the following functions. <i>Display Check</i> .
	4WD indicator	Shows when the 4WD drive mode is engaged. If the indicator blinks with the differential lock indicator when there is any abnormality in the front final gear system. See page 22 .
	Gear position indicator	Shows the gear position (page 24).
	LOW indicator	Shows when low (L) range is engaged (page 23).
	Maintenance minder indicator	Shows when specified maintenance interval is reached (page 33).
	Speedometer	Shows riding speed.
	Fuel gauge	Shows approximate fuel supply available (page 25).
	Digital clock	Shows the time (hour and minutes) (page 27).
	Odometer	Shows accumulated mileage (page 28).
	Tripmeter	Shows mileage per trip (page 28).
	Coolant temperature gauge	Shows approximate coolant temperature (page 29).
	Hourmeter	Shows hours and tenths of hours of engine operation (page 31).
Maintenance tripmeter	Inform when the mileage or operating hours on your ATV approaches and passes the interval specified on the maintenance schedule (page 32).	
Maintenance hourmeter		