


# If the Transmission Is Not Functioning Properly

If the ATV does not move, even though “-” is not blinking in the gear position indicator:

If your ATV won't move, it is possible the transmission system has malfunctioned. Use the following procedure to manually over-ride the clutch of the transmission.

1. Shift the transmission into 2nd gear.
2. Apply the parking brake ([page 50](#)).
3. Turn the ignition switch to the OFF (O) position.
4. Loosen the screw (1) and release the lock plate (2).
5. Locate the emergency valve access hole (4) inside the left front fender. Using a screwdriver, turn the emergency valve (3) all the way in. With the engine running, slowly open the throttle to move the ATV forward.
6. See your dealer as soon as possible.


LEFT FRONT

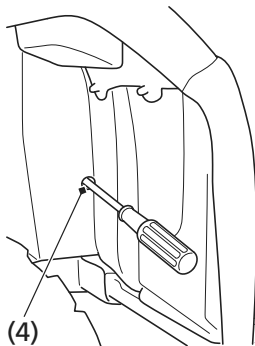

(1) screw

(2) lock plate

LEFT SIDE

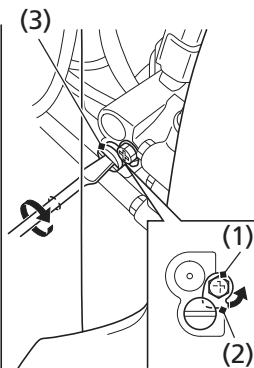

(3) emergency valve

(4) emergency valve access hole

When the battery is low (or dead):

- See *If the Battery Is Low (or Dead)*, [page 239](#).