## Is Your ATV Ready to Ride?

Cable Check the cable housings for wear. Check

the fittings for looseness. Replace or tighten

as needed.

Lights Make sure the headlights, brake light and

taillight are working properly.

If you are carrying cargo, also check the following:

Loading Limits Make sure you do not exceed the load limits

(page 70).

Cargo Check that all cargo is secure.

Check these items after you get on the ATV:

Throttle Check the freeplay and adjust if needed.

> Press the throttle to make sure it moves smoothly without sticking, and snaps shut automatically when it is released, in all

steering positions (page 165).

Brakes Squeeze the front and rear brake levers and

step on the rear brake pedal to check that the controls operate normally. Depress the rear brake pedal several times, then check for proper rear brake lever/parking brake lever freeplay (page 182). Make sure there is

no brake fluid leakage.

Reverse Assist Lever Check the freeplay and adjust if needed

(page 167). Make sure the lever operates

smoothly without sticking.

(cont'd)